



Hose Clamp Tools Manual

KC-18 Pliers

For use with single wire "HC" hose clamps:




Single Wire Hose Clamp Plier (KC-18)

Install Rotor Clamp Single Wire (HC) hose clamps quickly and easily using this simple hand tool. ONE SIZE FITS ALL. Specify **KC-18** for any Rotor Clamp Single Wire (HC) hose clamp you are installing.

HAZ-2 Pliers

For use with single wire "HC" hose clamps:

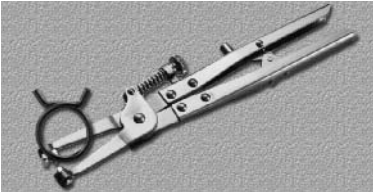

Single Wire Hose Clamp Plier - Heavy Duty (HAZ-2)

A heavy-duty version of the Single Wire Pliers (KC-18). Tool locks into place when clamp is fully compressed, relieving hand pressure when installing/removing. Tips can be adjusted to desired clamp opening to ensure fast, consistent installation or removal. ONE SIZE FITS ALL. Specify **HAZ-2** for any Rotor Clamp Single wire (HC) hose clamp you are installing.

HAZ-1 Pliers

For use with Constant Tension Band "CTB" hose clamps:


 


Constant Tension Band Hose Clamp Plier (HAZ-1)

A rugged easy-to-use application tool for CTB hose clamps. Tool locks into place when clamp is fully compressed, relieving hand pressure when installing/removing. Tips can be adjusted to desired clamp opening to ensure fast, consistent installation or removal. ONE SIZE FITS ALL. Specify **HAZ-1** for any Rotor Clamp Constant Tension Band (CTB) hose clamp you are installing.

Please wear protective eyewear while installing and removing retaining rings & hose clamps.

Hose Clamp Tools Pneumatic

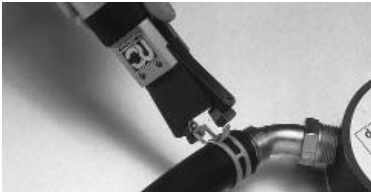

Pneumatic Hose Clamp Tools

Pneumatic Hose Clamp Tools use a compressed air line of 90 psi, and are activated by a simple lever reducing stress on the hand from repeated assembly/disassembly. Tangs of the clamp fit in the jaws of the tool and are compressed for installation or removal on the hose. Helps eliminate carpal tunnel syndrome.



PWS Pneumatic Tool

For use with Rotor Clamp Single Wire (HC/HW) hose clamps

Rotor Clamp HC No.	Pneumatic Installation Tool	Rotor Clamp HC No.	Pneumatic Installation Tool
HC-4	PWS-4	HC-19	PWS-19
HC-5	PWS-5	HC-19.5	PWS-19.5
HC-5.5	PWS-5.5	HC-20	PWS-20
HC-6	PWS-6	HC-21	PWS-21
HC-7	PWS-7	HC-22	PWS-22
HC-7.5	PWS-7.5	HC-23	PWS-23
HC-8	PWS-8	HC-24	PWS-24
HC-8.5	PWS-8.5	HC-25	PWS-25
HC-9	PWS-9	HC-26	PWS-26
HC-9.5	PWS-9.5	HC-28	PWS-28
HC-10	PWS-10	HC-30	PWS-30
HC-10.5	PWS-10.5	HC-31	PWS-31
HC-11	PWS-11	HC-32	PWS-32
HC-12	PWS-12	HC-34	PWS-34
HC-13	PWS-13	HC-35	PWS-35
HC-14	PWS-14	HC-36	PWS-36
HC-15	PWS-15	HC-38	PWS-38
HC-16	PWS-16	HC-40	PWS-40
HC-17	PWS-17	HC-42	PWS-42
HC-17.5	PWS-17.5	HC-46	PWS-46
HC-18	PWS-18	HC-50	PWS-50
HC-188	PWS-188		



Single Wire (HC/HW) Hose Clamp Pneumatic Tool (PWS). Designations for individual clamp sizes are listed left.



Double Wire (DW) Hose Clamp Pneumatic Tool (PWD). Designations for individual clamp sizes are listed left.



PWD Pneumatic Tool

For use with Rotor Clamp Double Wire (DW) hose clamps

Rotor Clamp DW No.	Pneumatic Installation Tool	Rotor Clamp DW No.	Pneumatic Installation Tool
DW-4.5	PWD-4.5	DW-17	PWD-17
DW-5	PWD-5	DW-17.5	PWD-17.5
DW-5.5	PWD-5.5	DW-18	PWD-18
DW-6	PWD-6	DW-19	PWD-19
DW-6.5	PWD-6.5	DW-19.5	PWD-19.5
DW-7	PWD-7	DW-20	PWD-20
DW-8	PWD-8	DW-21	PWD-21
DW-8.5	PWD-8.5	DW-22	PWD-22
DW-9	PWD-9	DW-22.5	PWD-22.5
DW-9.5	PWD-9.5	DW-23	PWD-23
DW-10	PWD-10	DW-24	PWD-24
DW-10.5	PWD-10.5	DW-25	PWD-25
DW-11	PWD-11	DW-26	PWD-26
DW-11.5	PWD-11.5	DW-27	PWD-27
DW-12	PWD-12	DW-28	PWD-28
DW-12.5	PWD-12.5	DW-30	PWD-30
DW-13	PWD-13	DW-31	PWD-31
DW-14	PWD-14	DW-32	PWD-32
DW-14.5	PWD-14.5	DW-34	PWD-34
DW-15	PWD-15	DW-35	PWD-35
DW-16	PWD-16	DW-36	PWD-36



PBC-1 Pneumatic Tool

For use with Rotor Clamp Constant Tension Band (CTB) hose clamps.



Specify **PBC-1** for any Rotor Clamp CTB Hose Clamp you are installing. One size fits all.



PRT Pneumatic Tool

For use with Rotor Clamp Constant Tension Band (CTB) hose clamps.



The PRT is an innovative application system for pre-opened hose clamps (CTO). It guarantees the perpendicular placement of the clamp to the hose and mating tube. It eliminates clamps placed at an angle which can possibly lead to leaks and loosening of the hose. Clamps cannot be closed until the tool is properly in place. The PRT verifies that the clamp has been cycled by sending a confirmation to an electronic work station. The tool is ergonomic and can fit into limited space requirements due to its unique design and adapts easily to standard assembly line air supply systems.

Please wear protective eyewear while installing and removing retaining rings & hose clamps.

